

Porsche Carrera Cup France 2021

Note Technique 26/2021

Chers tous,

Veillez trouver ci-dessous la note technique 26/2021 applicable à votre Porsche 992 GT3 Cup. Nous restons à votre disposition si vous avez des questions.

MANCHONS DE RENFORT BERCEAU AV

Porsche Motorsport vous informe que de nouvelles vis de hauteur de caisse et manchons de renfort sont disponibles pour votre Porsche 991 GT3 Cup (type 992). Toutes les pièces nécessaires seront distribuées gratuitement par l'organisation de la PCCF à leurs concurrents. Pour toutes les voitures qui ne participeront plus à la PCCF en 2022, ces pièces peuvent être demandées gratuitement auprès de gt3cup.support@porsche.de en fournissant le numéro de châssis concerné.

Les voitures qui sont déjà équipées des manchons de renfort dès leur sortie d'usine sont également équipées des nouvelles vis de hauteur de caisse. Les valeurs de hauteur de caisse demeurent inchangées en cas d'utilisation de ces nouvelles pièces.

Porsche Motorsport recommande que les nouvelles vis de hauteurs de caisse ne soient serrées qu'une seule fois, et remplacées après chaque démontage.

Liste des pièces

	Quantité	Ancienne ref.	Nouvelle ref.
Vis	2	N.913.041.01 ou N912.534.01	WHT.008.757
Manchon	2	-	9F1.407.371

Ancienne vis (N.913.041.01 ou N912.534.01)




Nouvelle vis (WHT.008.757) avec manchon



Les étapes suivantes doivent être répétées sur les côtés droit et gauche de la voiture :

1 – Retirer la vis de hauteur de caisse (N.913.041.01 ou N912.534.01)

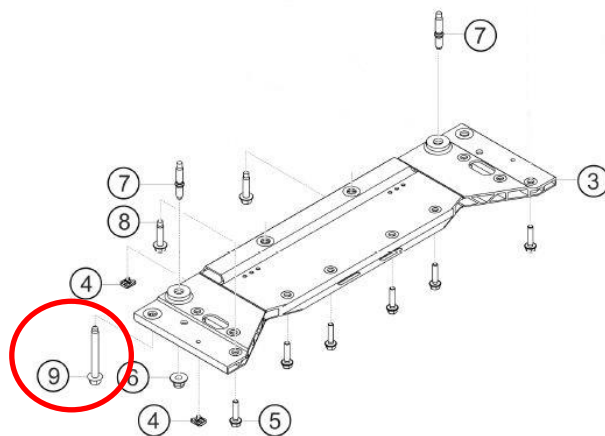

2 – Nettoyer la surface de contact entre le berceau et le nouveau manchon

3 – Insérer le manchon de renfort dans le berceau



4 – Visser la nouvelle vis de hauteur de caisse (WHT.008.757) et serrer à 70N.m+180°



REINFORCEMENT SLEEVE FRONT SUBFRAME

Porsche Motorsport informs that new ride height measurement bolts and reinforcement sleeves are available for the Porsche 911 GT3 Cup (992). All necessary parts will be distributed free of charge by your local series organization. For cars not participating in a one-make championship, parts can be requested and ordered free of charge at gt3cup.support@porsche.de by stating the chassis number of the car. Cars that have reinforcement sleeves installed ex works are already equipped with new ride height measurement bolts. The car's ride height measurement values remain unaffected by the new parts.

Porsche Motorsport recommends tightening the new ride height measurement bolt only once and replacing it every time it's loosened.

Parts list

	Quantity	Old part number	New part number
Bolt	2	N.913.041.01 ou N912.534.01	WHT.008.757
Sleeve	2	-	9F1.407.371

Old bolt (N.913.041.01 or N912.534.01)




New bolt (WHT.008.757) with sleeve



The following steps must be implemented on both the left-and-right-hand sides of the car:

- 1 – Loosen and remove the bolt for ride height measurement (N.913.041.01 or N.912.534.01)

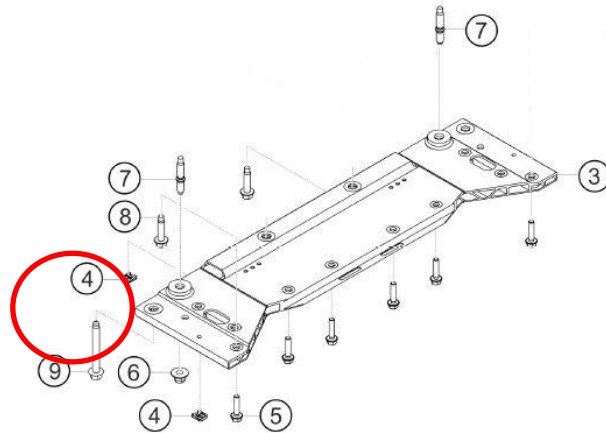

- 2 – Clean the surface of the subframe that contacts the reinforcement sleeve

- 3 – Insert the reinforcement sleeve into the subframe



- 4 – Screw in the bolt for ride height measurement (WHT.008.757) and tighten to 70 Nm + 180°

